


GARDENTOP

Nordic

Montageanleitung
Installation instruction

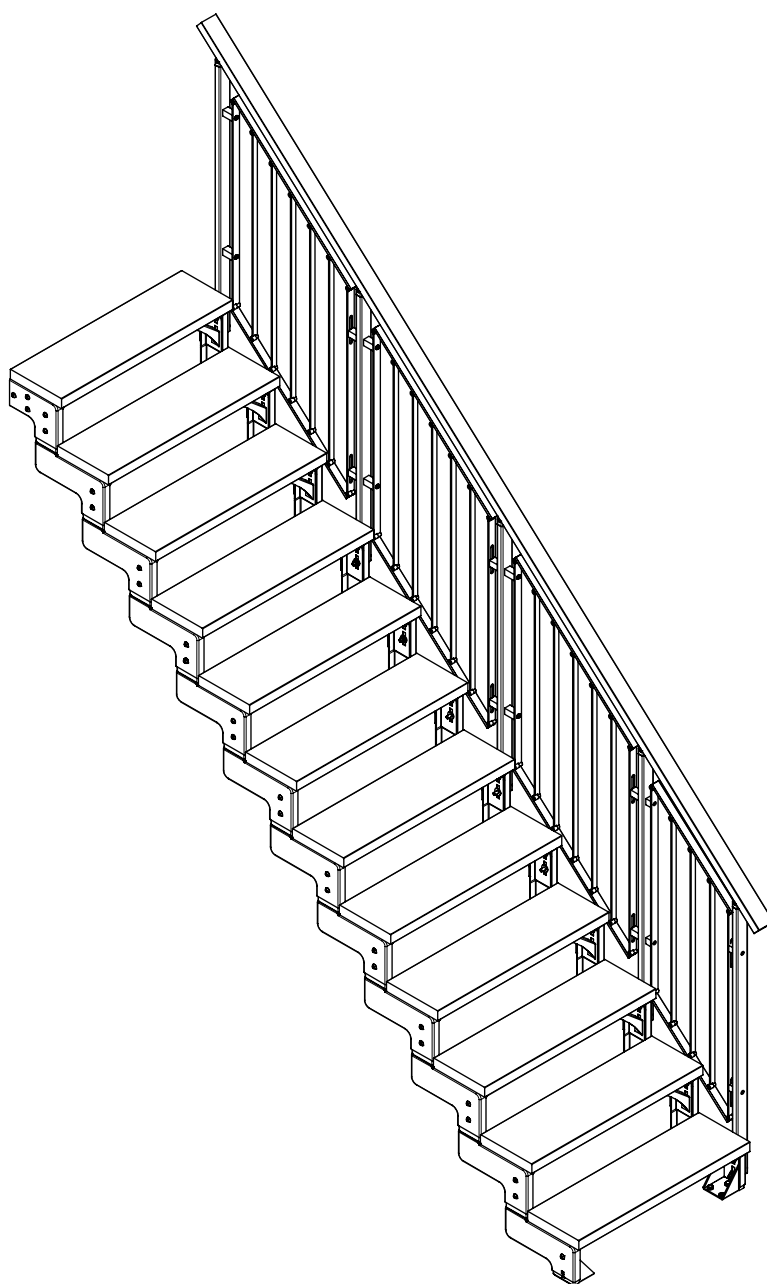

1068015			Starter-Set Start kit		
1 2 × 1 K1-41430 × 1 K1-41930			7 8 × 1 K1-41911 × 1 K1-41910		
			5 × 2 K2-41900		
			6 × 2 K1-41940		
40 × 14 K3-02045 M10×25	41 × 2 K3-04110 Ø10	42 × 8 K3-04198 Ø10	43 × 14 K3-03051 M10	44 × 12 K3-08001 Ø12 x 60	45 × 12 K3-06070 Ø10 x 60
59 × 12 K3-06269 Ø6 x 35	63 × 4 K3-05022 M8 x 20	64 × 12 K3-04010 Ø10,5			


1068016			Ergänzungs-Set 1 step kit		
3 4 × 1 K1-41921 × 1 K1-41920			40 × 4 K3-02045 M10 x 25		
			42 × 4 K3-04198 Ø10	43 × 4 K3-03051 M10	
			59 × 6 K3-06269 Ø6 x 35		

1068020			Stufen-Winkel Step support 1 step		
If more than 6 steps: Add 9 + 10 Wenn mehr als 6 Stufen: hinzufügen 9 + 10			9 10 × 1 K1-41060 × 1 K1-41061 Max. 6 Satz sets		
			40 × 2 K3-02045 M10 x 25	43 × 2 K3-03051 M10	58 × 2 K3-02386 M8 x 40
			59 × 2 K3-06269 Ø6 x 35	61 × 2 K3-03047 M8	65 × 2 K3-04099 Ø10

1075360

Treppenpfosten
Staircase post

(20)



x 1
K2-75360

(70)



x 2
K3-06302
Ø4 x 20



(71)




x 12
K3-02375
M10 x 75



1075282


Geländerfüllungen 2 Stufen
Banister filling 2 steps

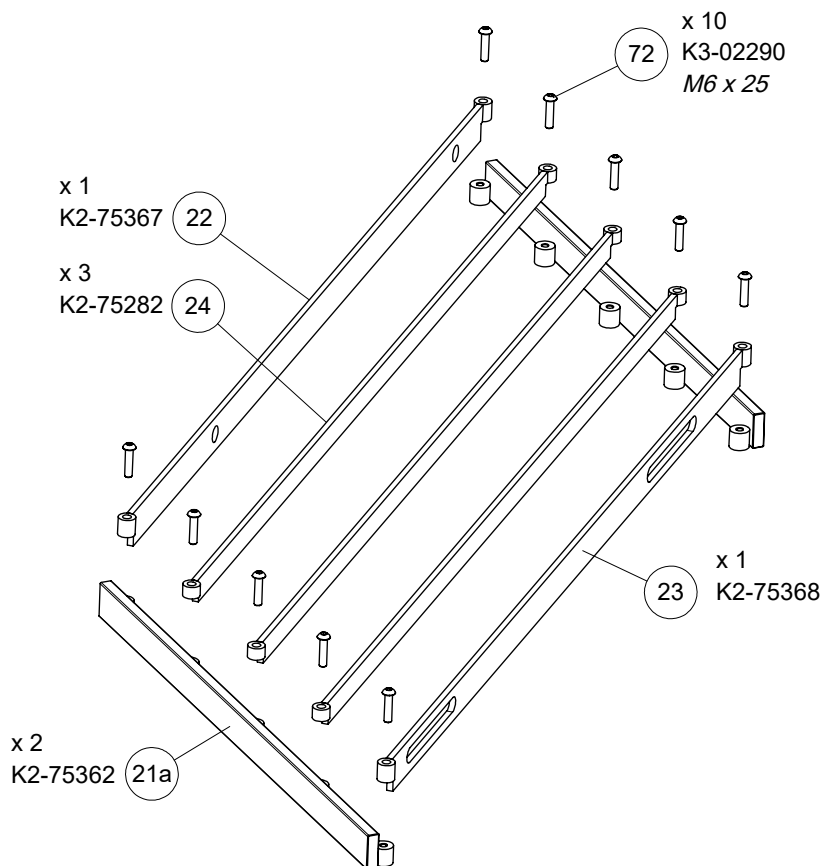

x 1
K7-75392

1075283

Geländerfüllungen 3 Stufen
Banister filling 3 steps

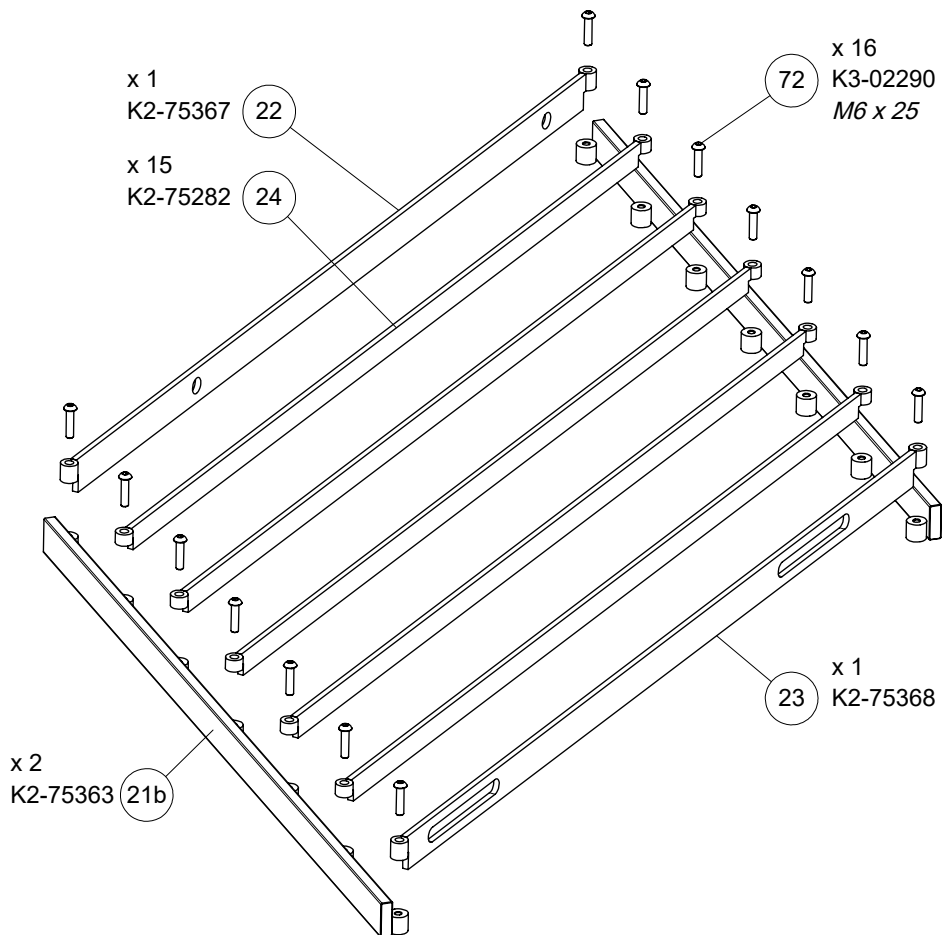

x 1
K7-75392

K7-75391	76 x 2 K3-02316 M8 x 16	80 x 2 K3-02336 M8 x 40	82 x 4 K1-75391 38mm	83 x 2 K3-02305 M8 x 50	91 x 4 K1-75390

K7-75392	75 x 2 K3-02313 M8 x 12	81 x 2 K1-75392 62mm	84 x 2 K3-02307 M8 x 75	89 x 2 K3-02306 M8 x 60	91 x 4 K1-75390



28 x 1 K1-75380	
----------------------------------	--

97 	
---------------	--

Handläufe / Handrail


1068098		Unterstützung Support		OPTION	
24 	26 x 1 K1-41955	27 x 1 K1-41956	41 x 1 K3-04110 Ø10	43 x 1 K3-03051 M10	52 x 1 K3-02375 M10 x 75
	53 x 2 K3-05007 M5 x 5	54 x 1 K3-08002 Ø8 x 40	55 x 1 K3-06032 Ø6 x 60		





24
x 1
K1-41950




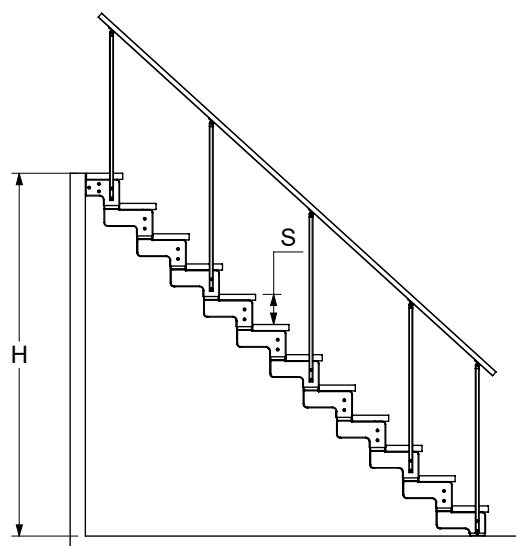
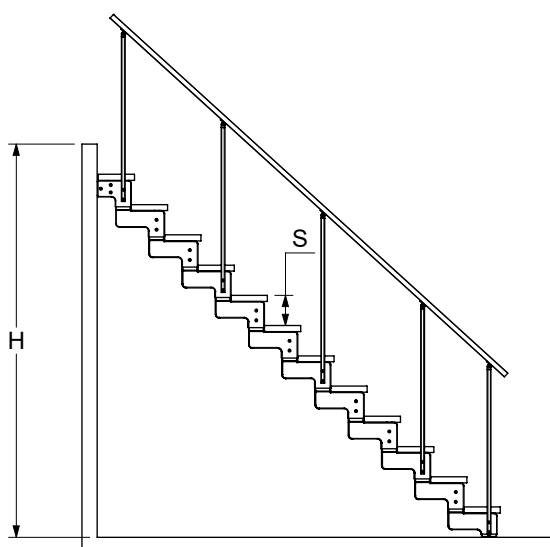






H	S				
	180 mm	190 mm	200 mm	210 mm	220 mm
2	540	570	600	630	660
3	720	760	800	840	880
4	900	950	1000	1050	1100
5	1080	1140	1200	1260	1320
6	1260	1330	1400	1470	1540
7	1440	1520	1600	1680	1760
8	1620	1710	1800	1890	1980
9	1800	1900	2000	2100	2200
10	1980	2090	2200	2310	2420
11	2160	2280	2400	2520	2640
12	2340	2470	2600	2730	2860





H	S				
	180 mm	190 mm	200 mm	210 mm	220 mm
2	360	380	400	420	440
3	540	570	600	630	660
4	720	760	800	840	880
5	900	950	1000	1050	1100
6	1080	1140	1200	1260	1320
7	1260	1330	1400	1470	1540
8	1440	1520	1600	1680	1760
9	1620	1710	1800	1890	1980
10	1800	1900	2000	2100	2200
11	1980	2090	2200	2310	2420
12	2160	2280	2400	2520	2640

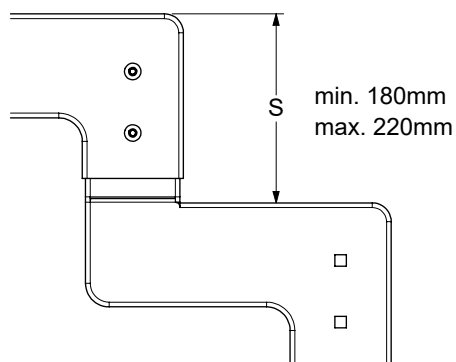

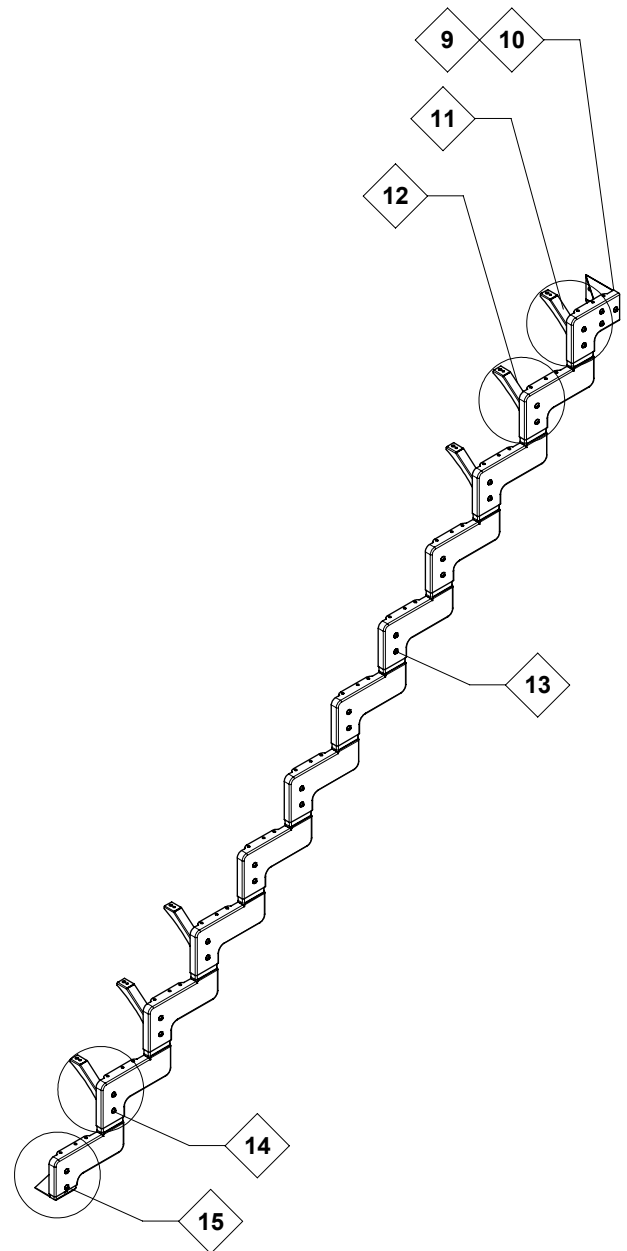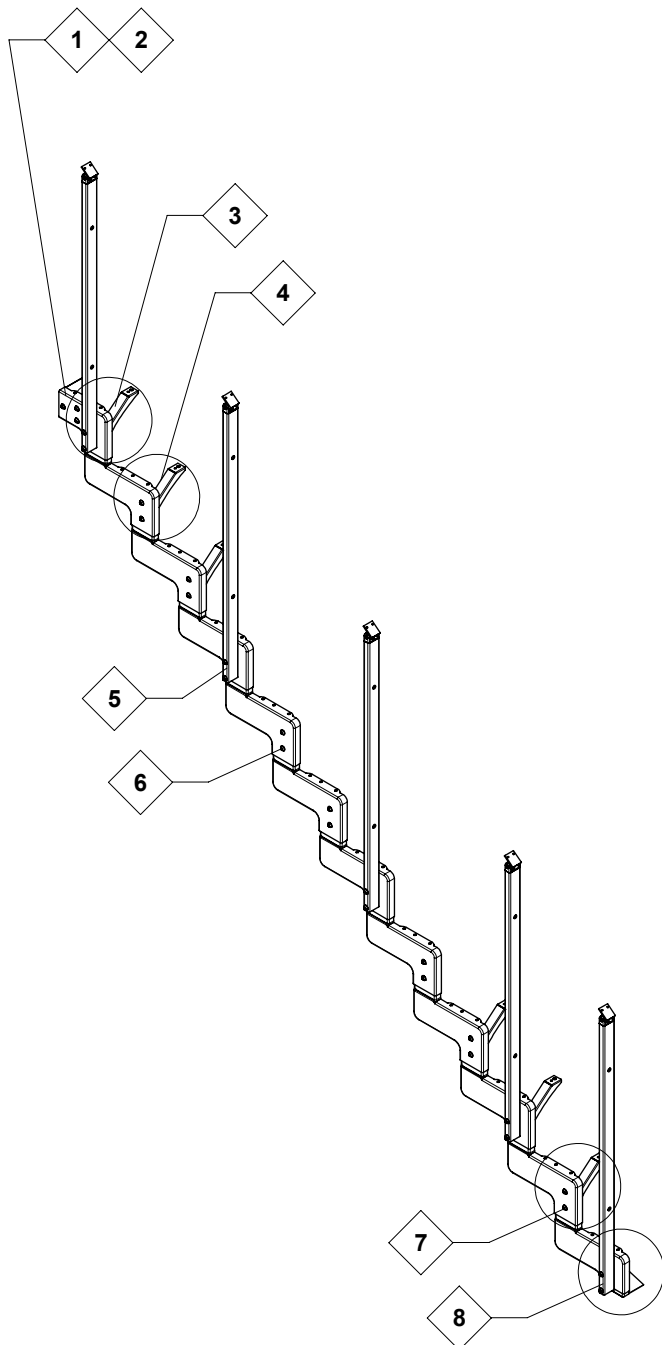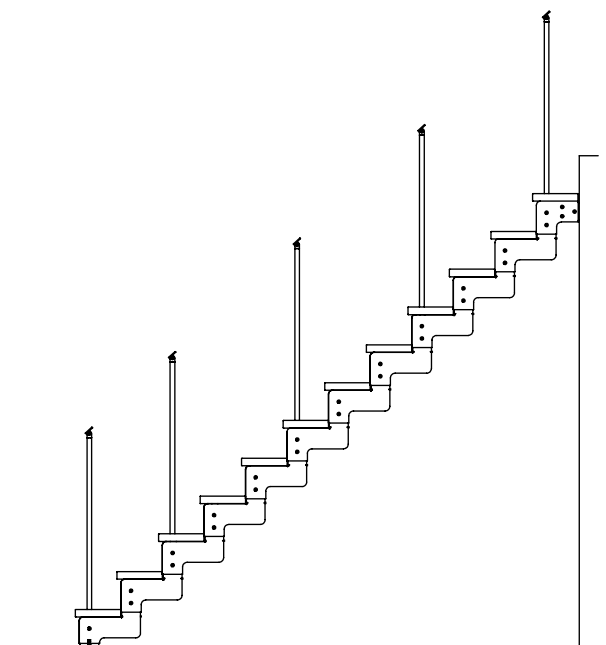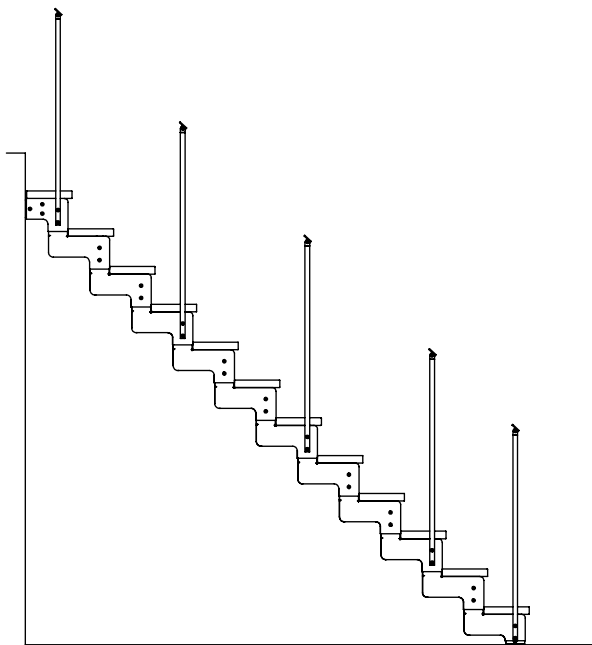


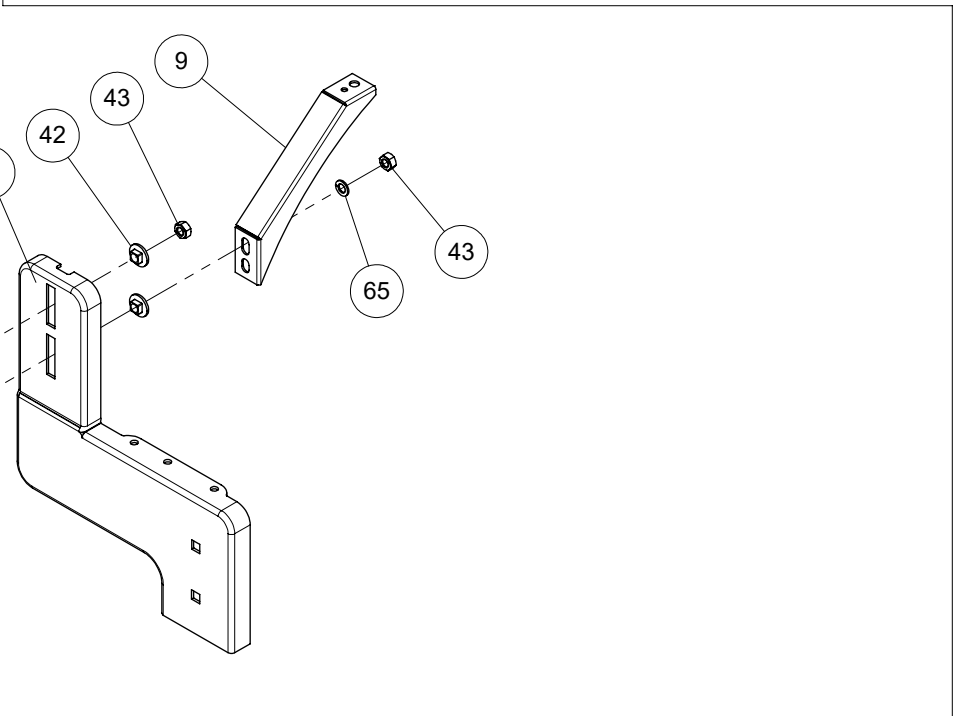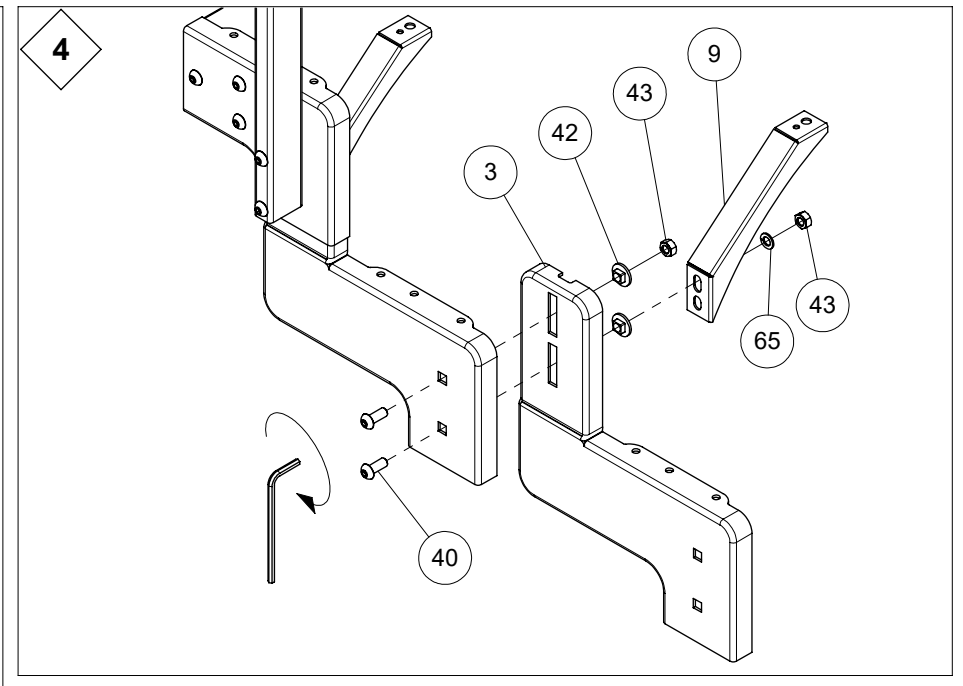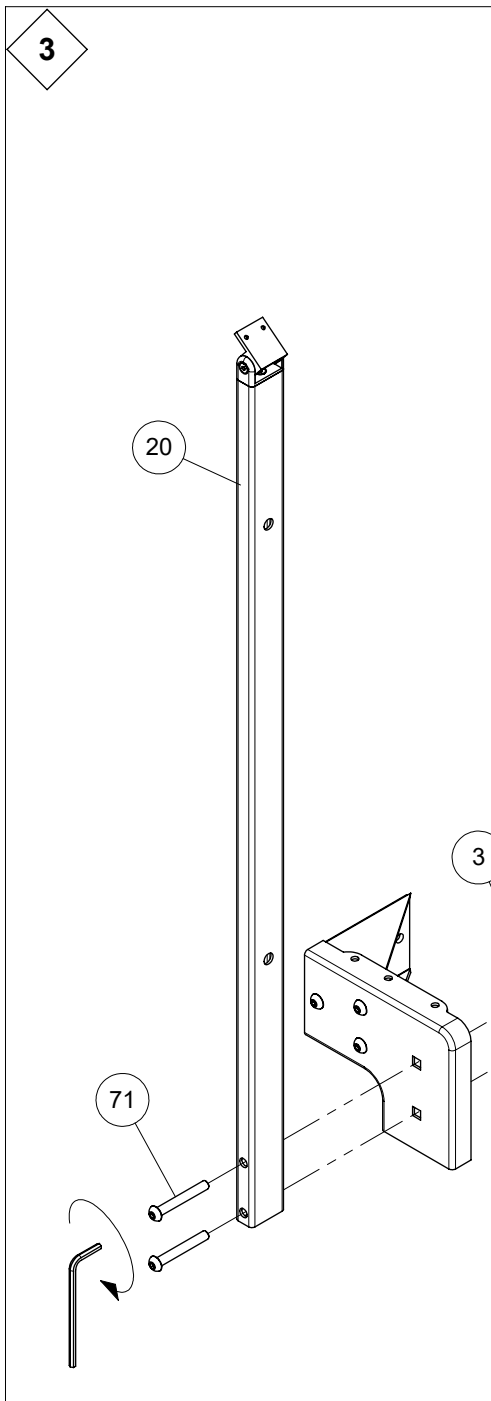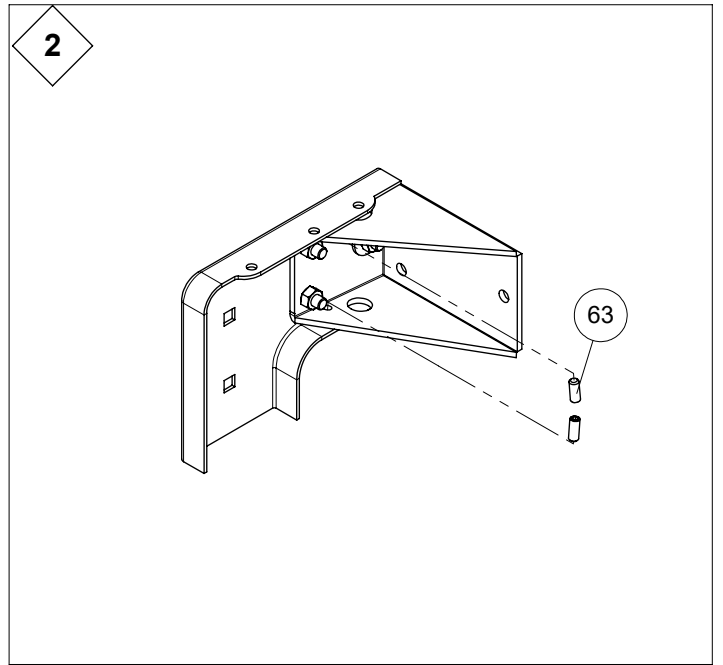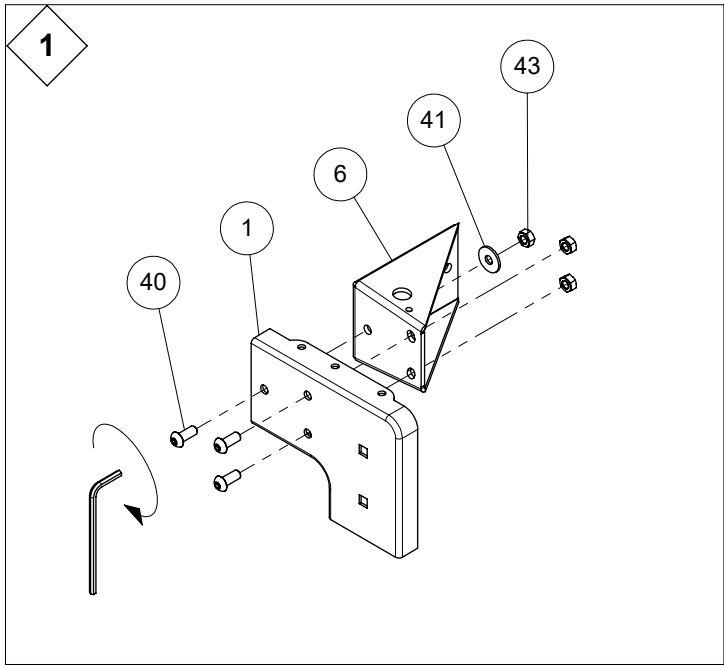

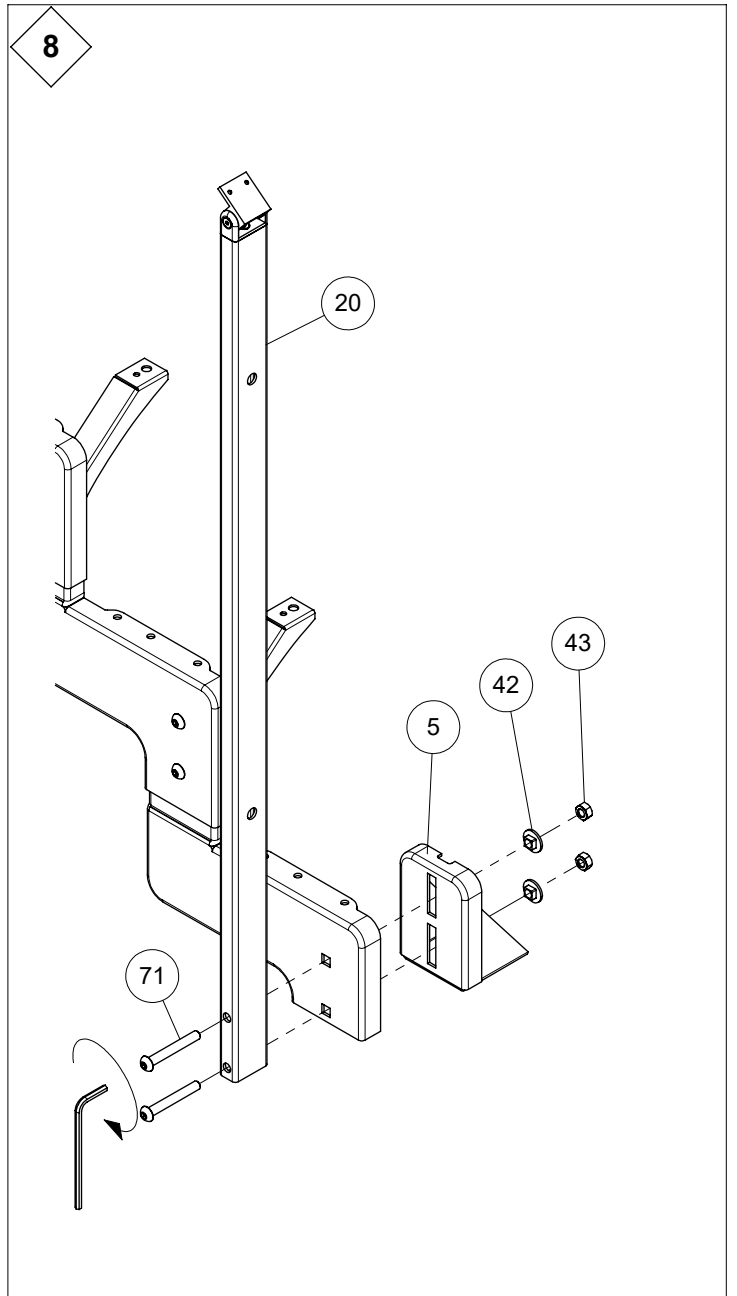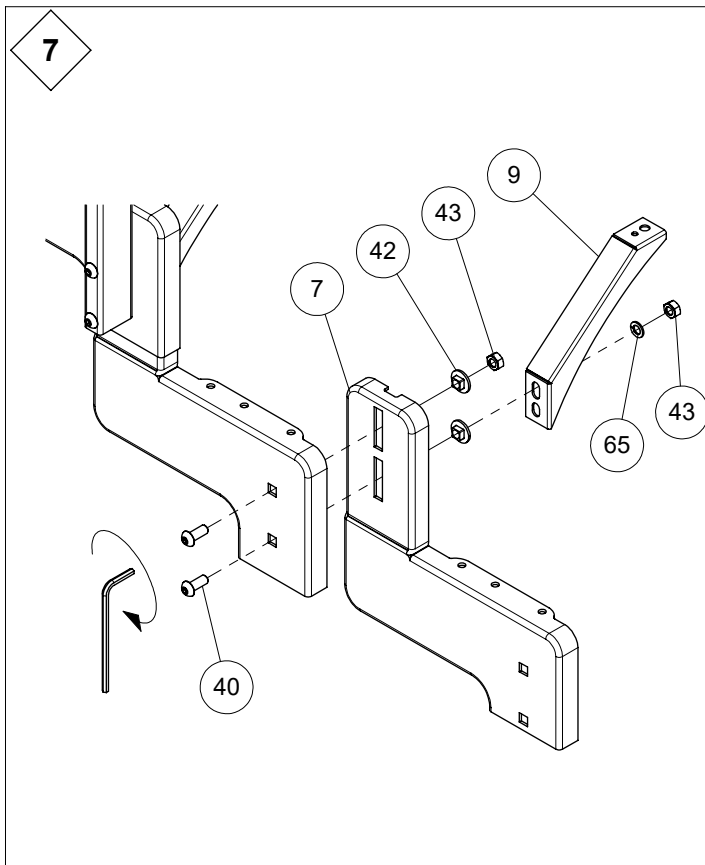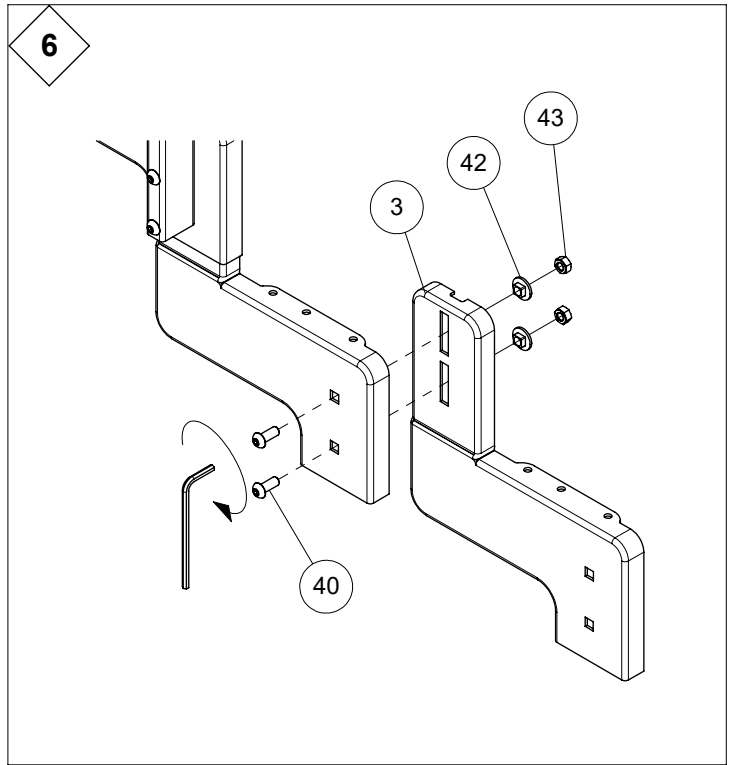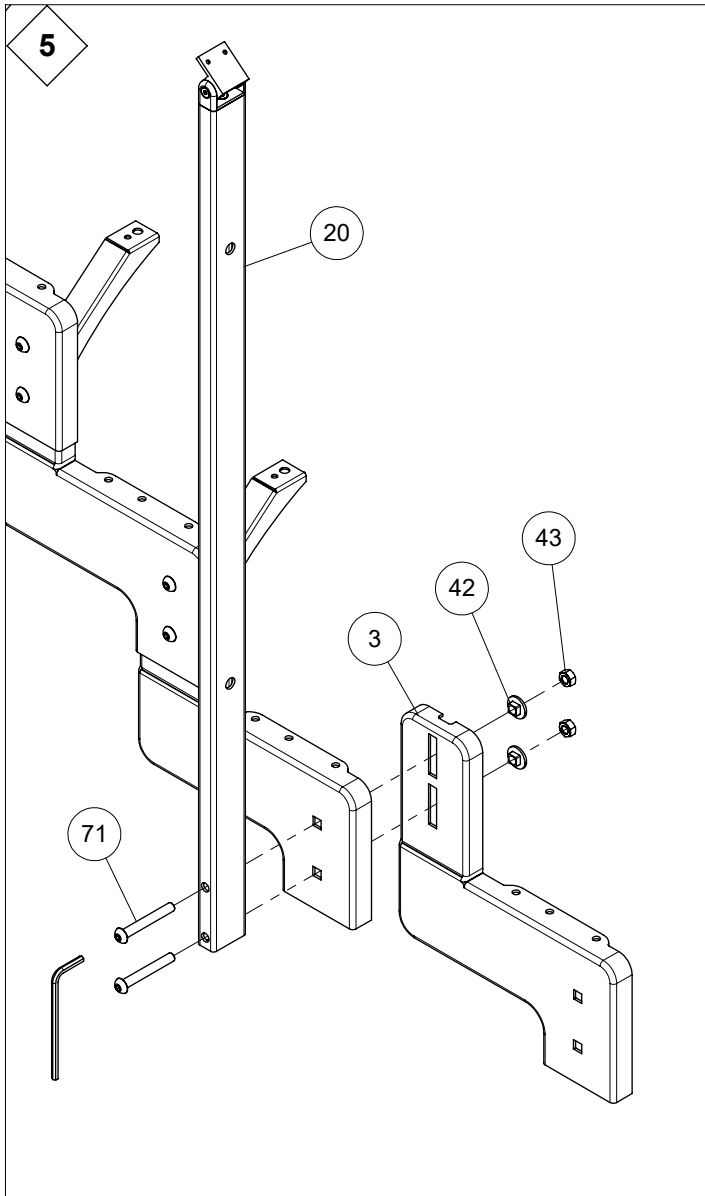


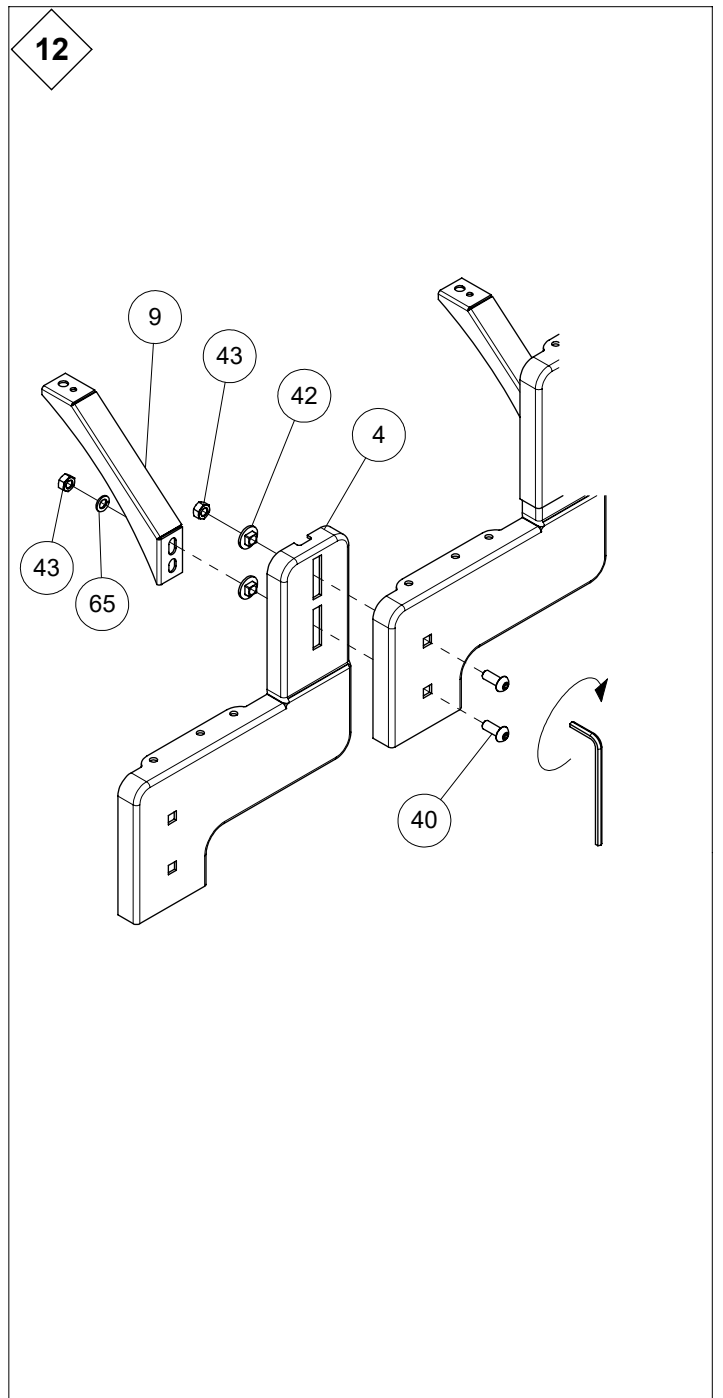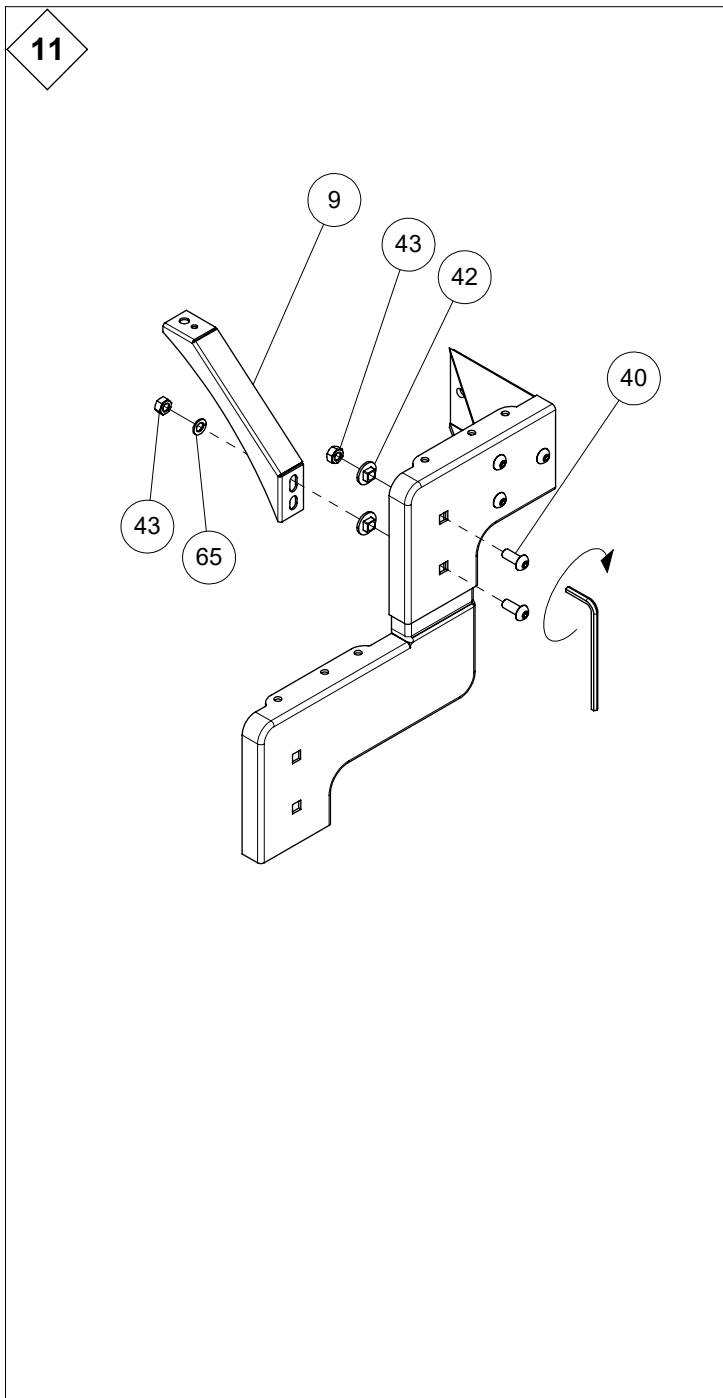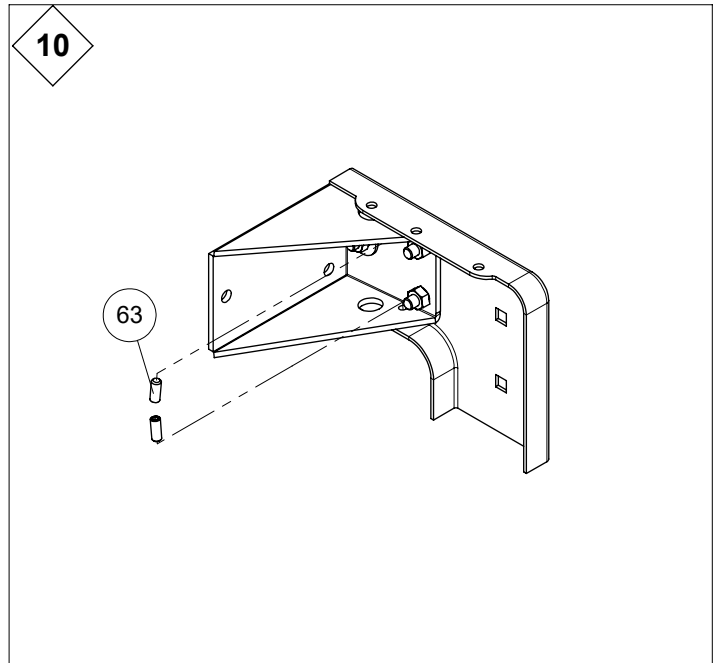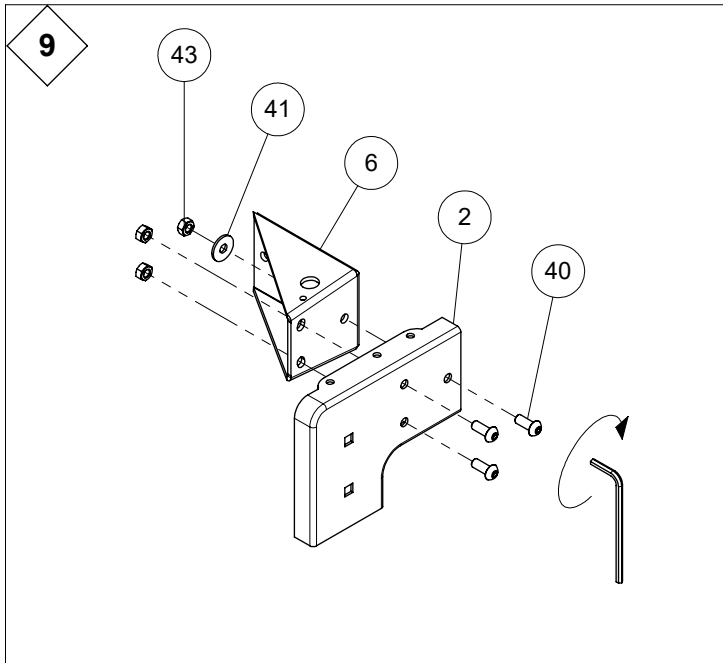


13

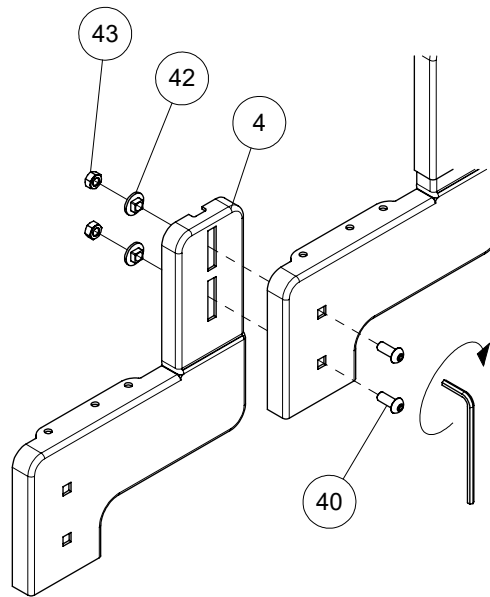


14

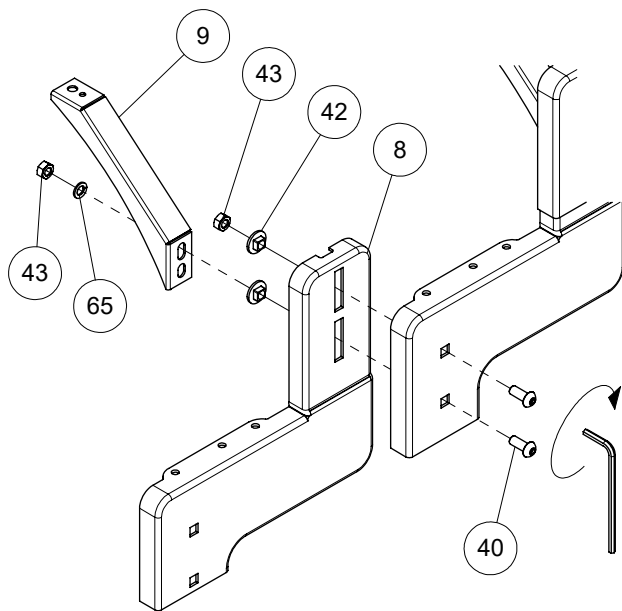



15

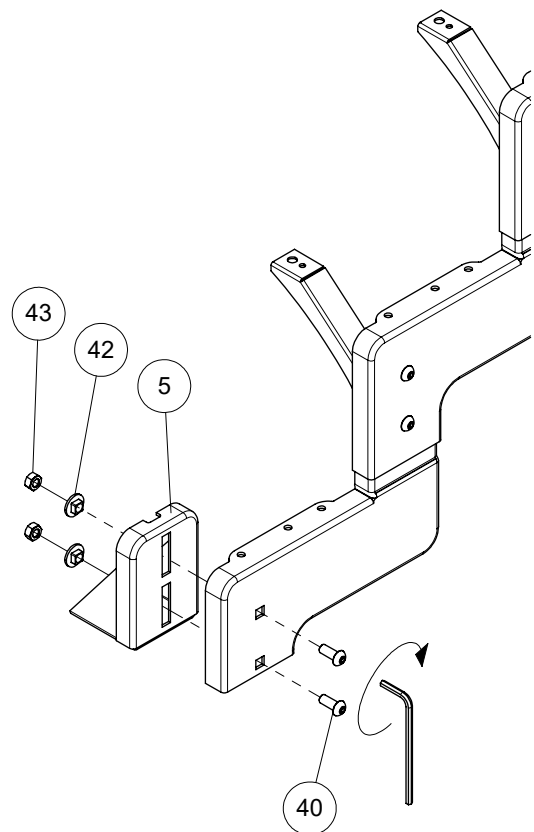


Stufe / Step	W
80 cm	803 mm
100 cm	1003 mm

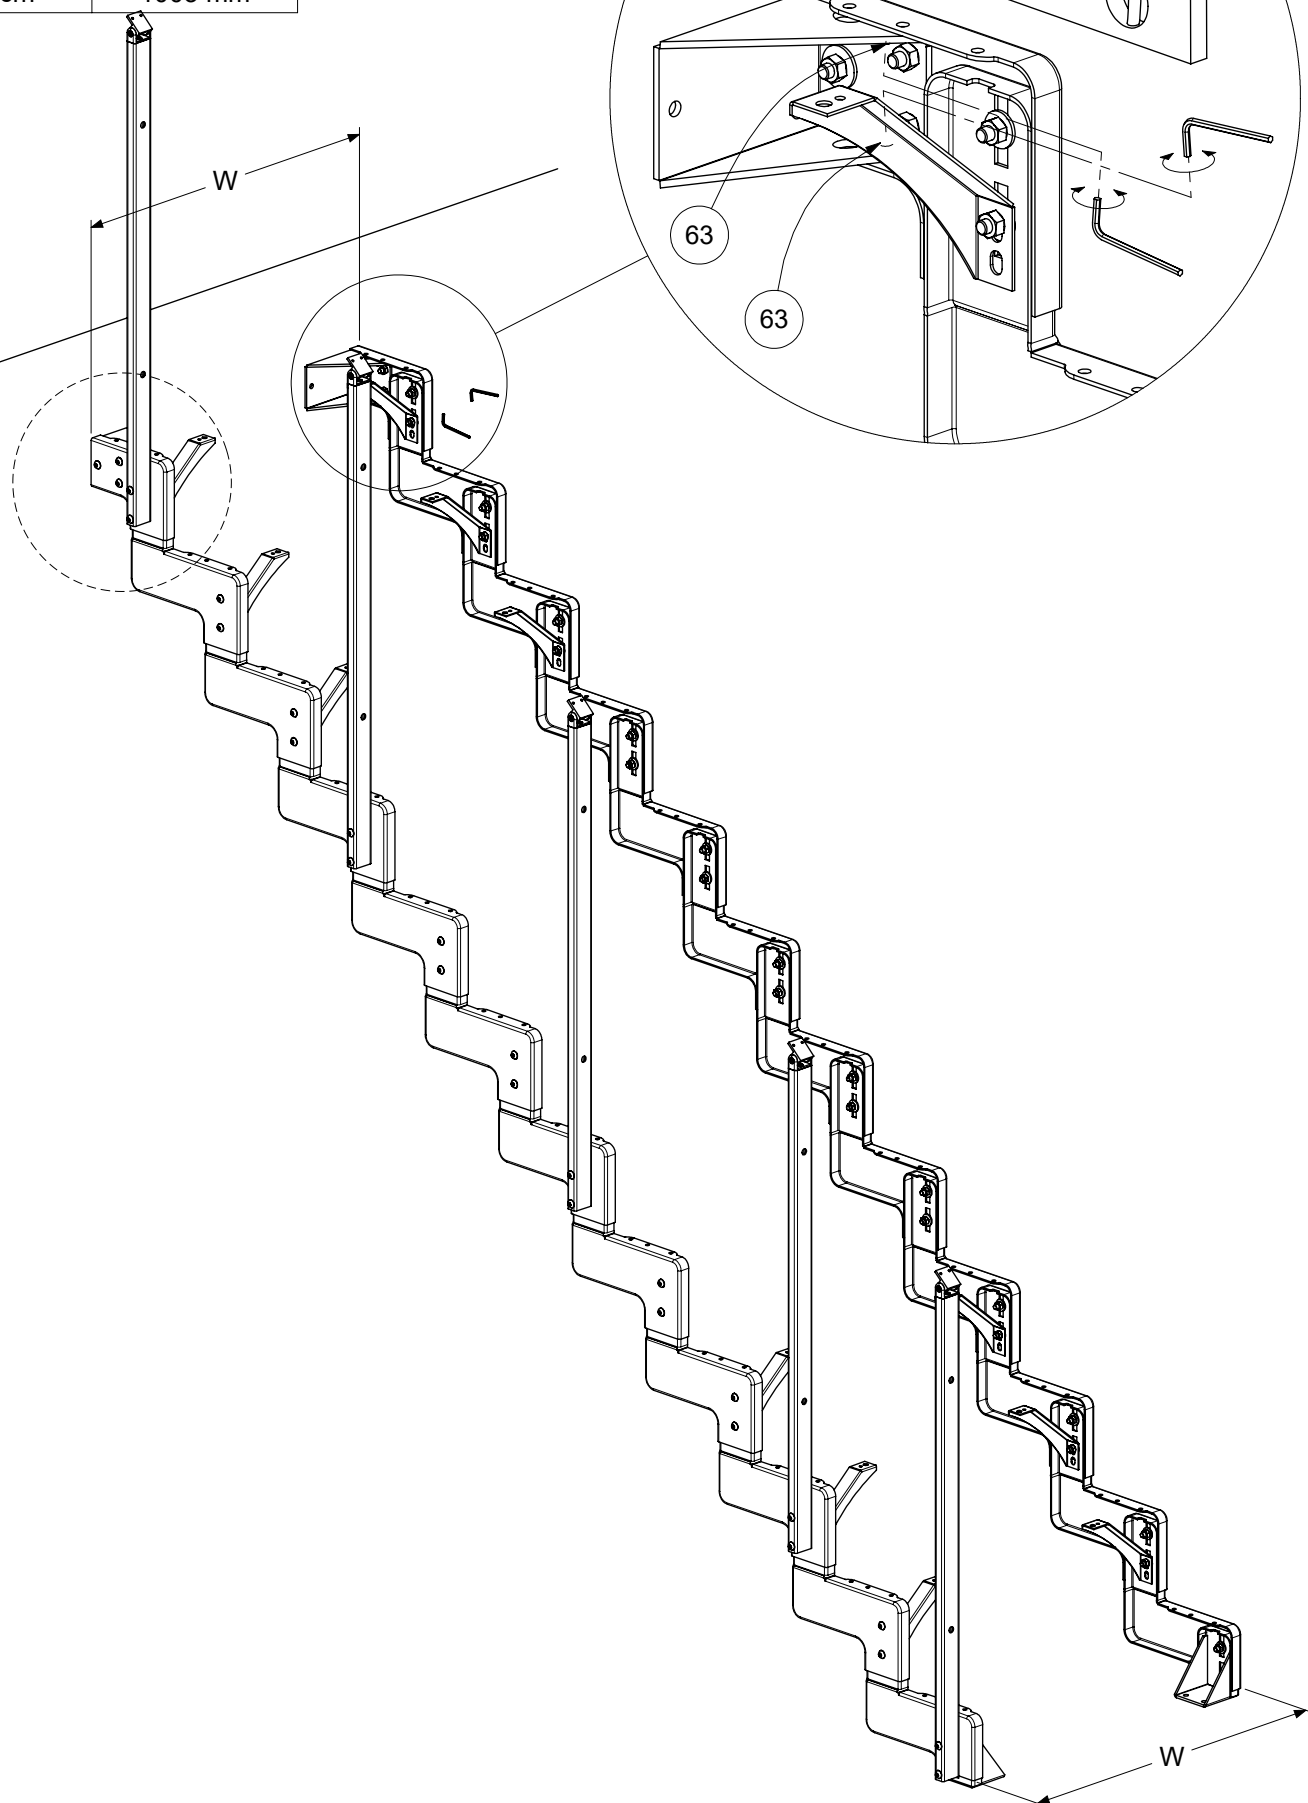


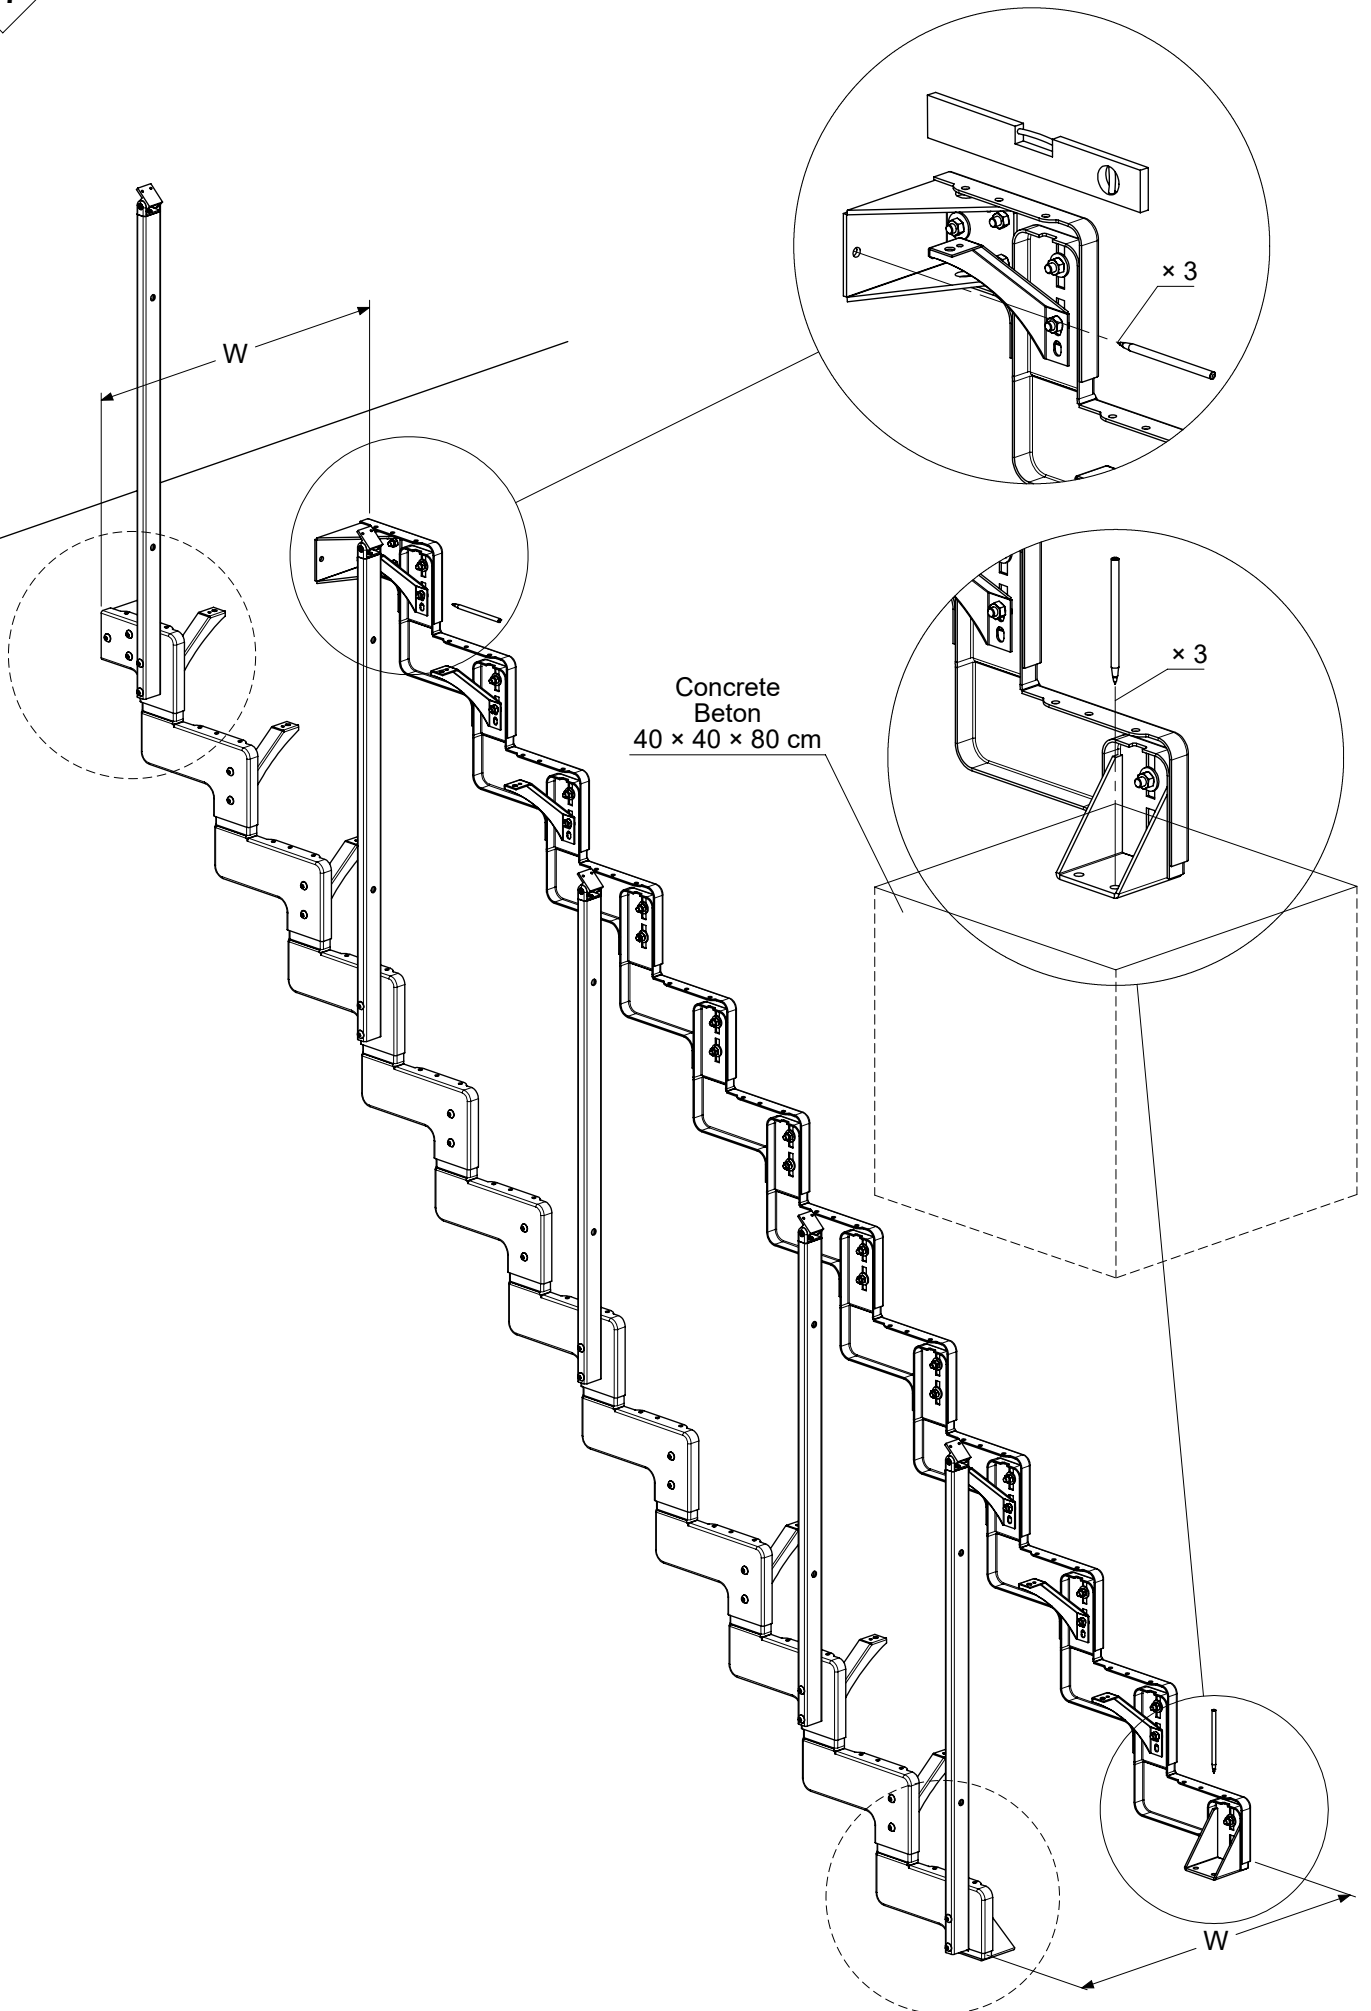


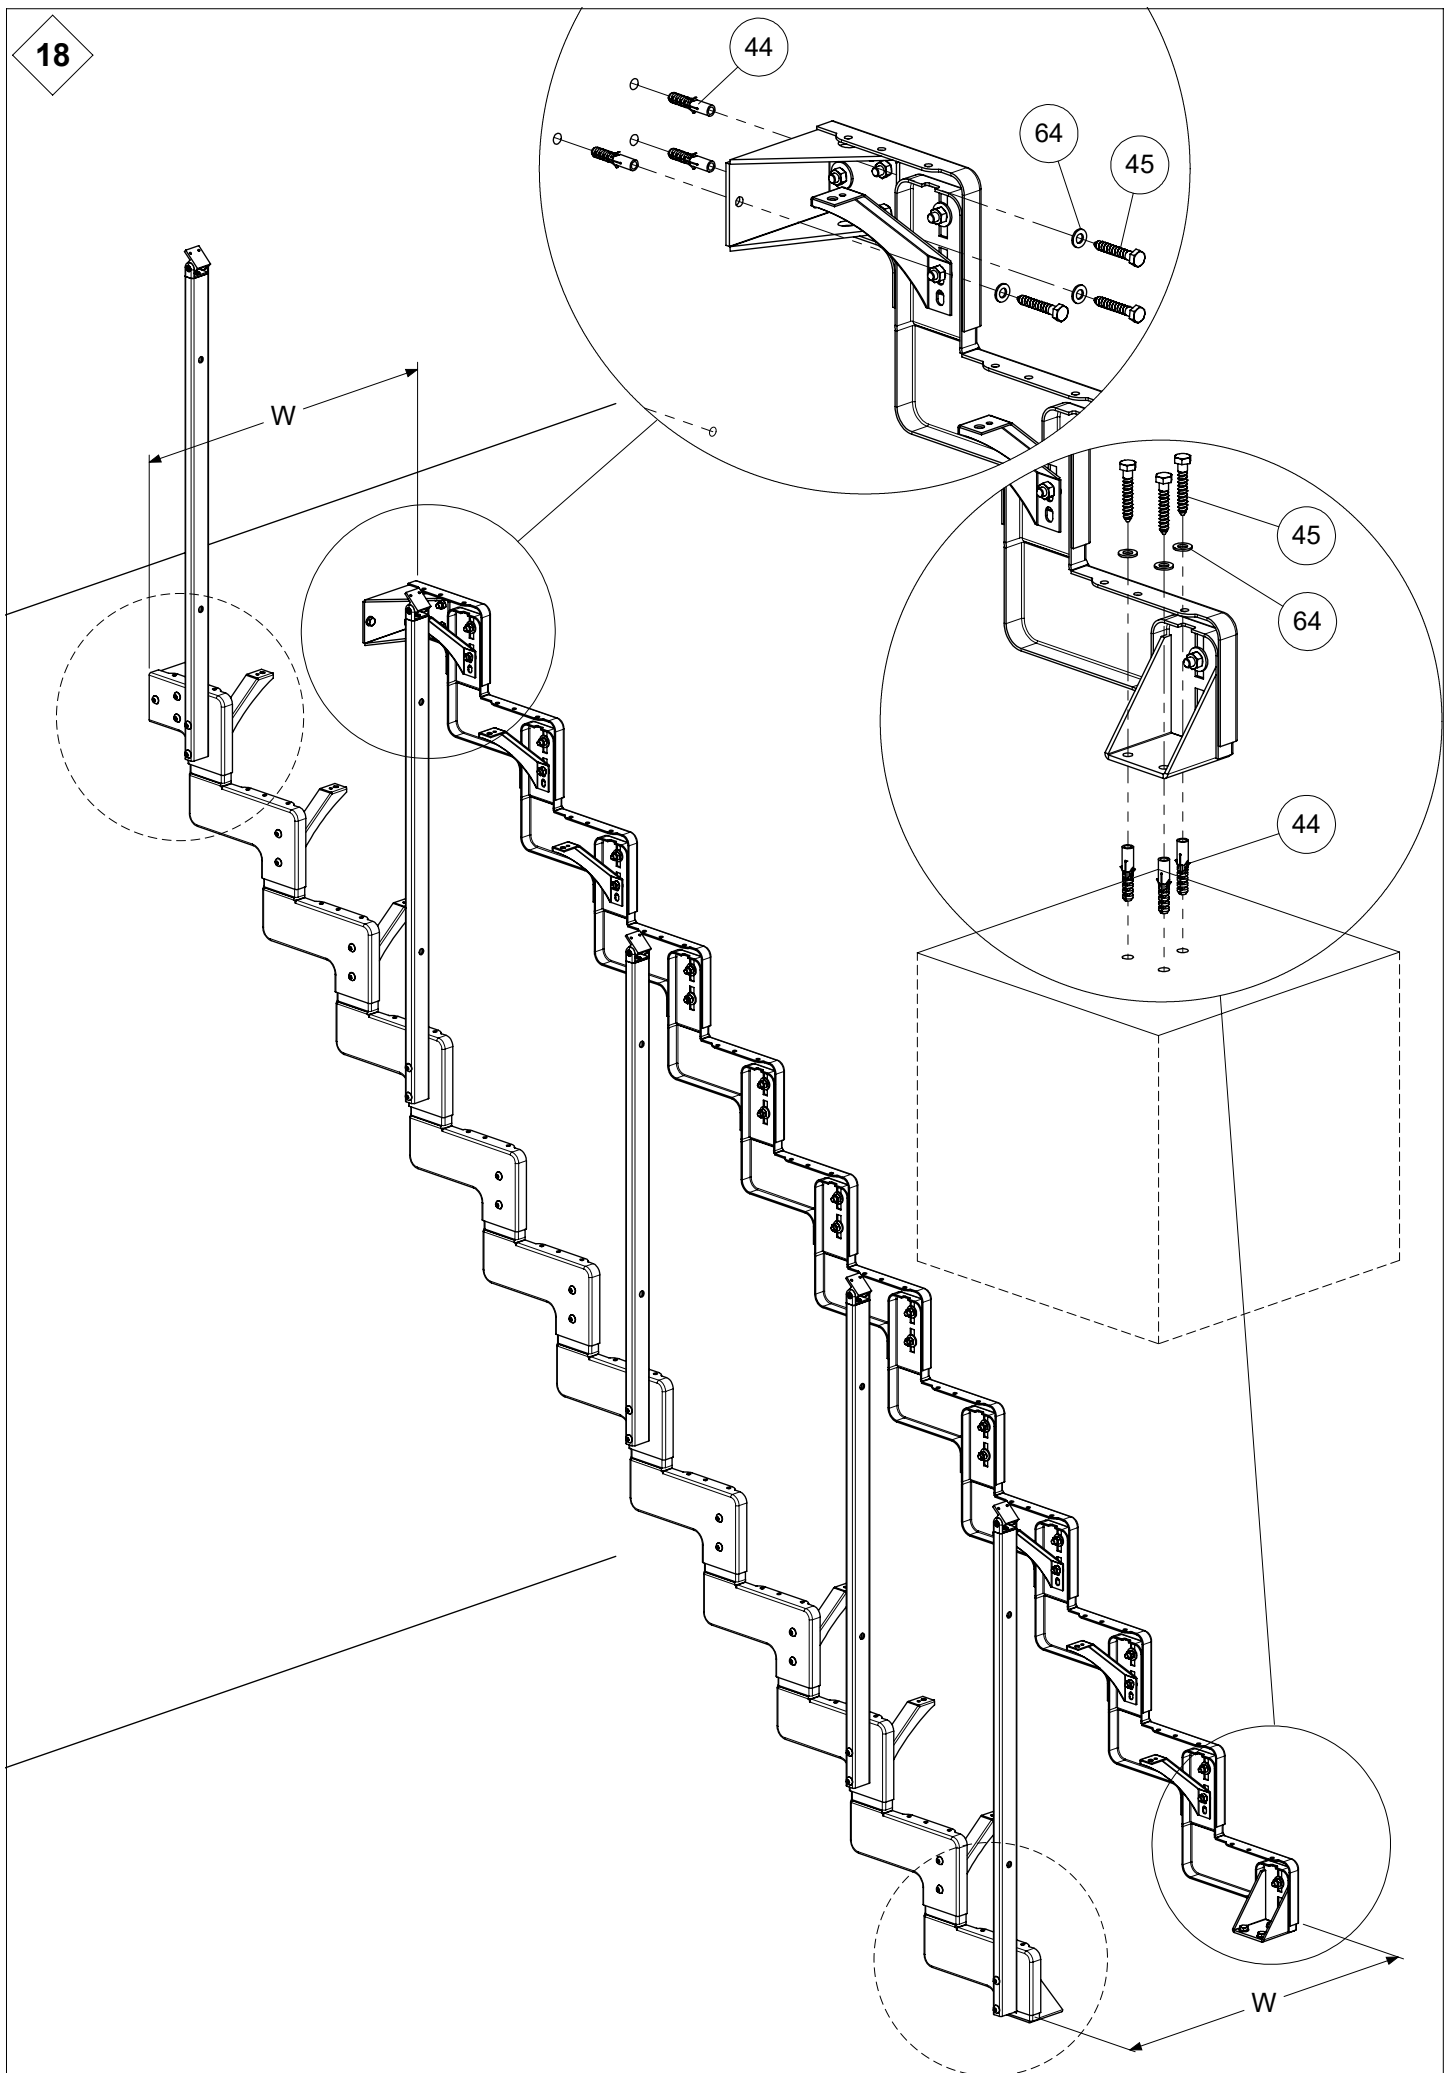


19

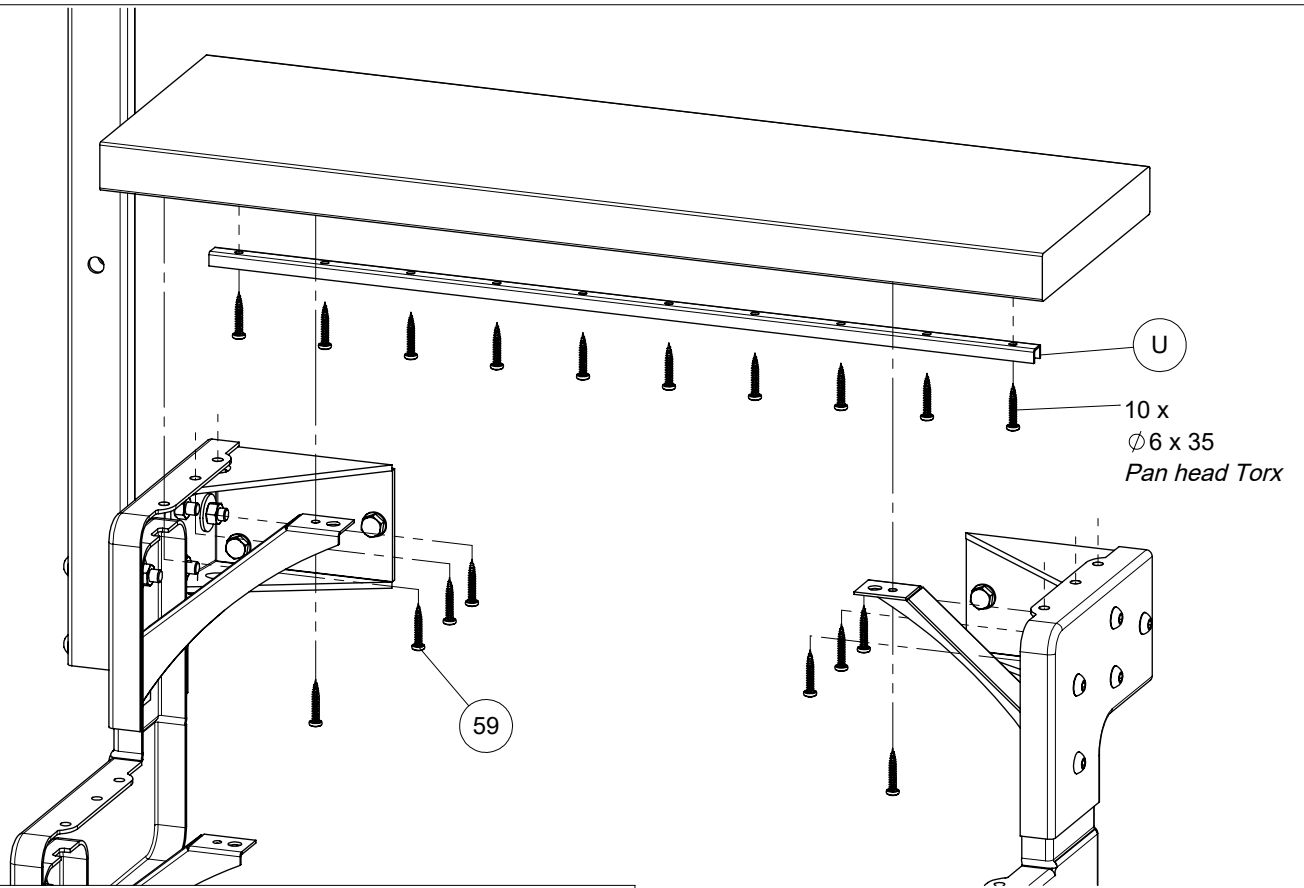


20

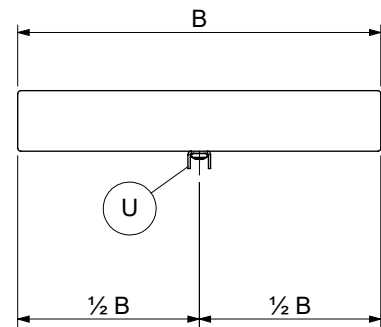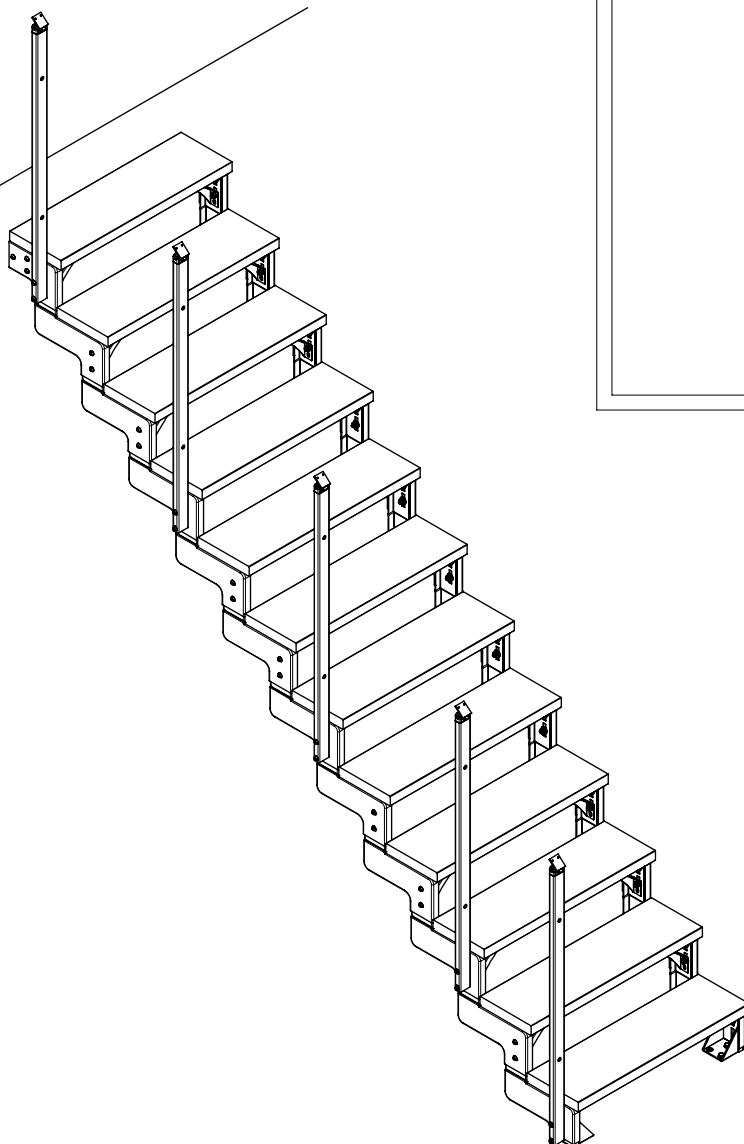


21

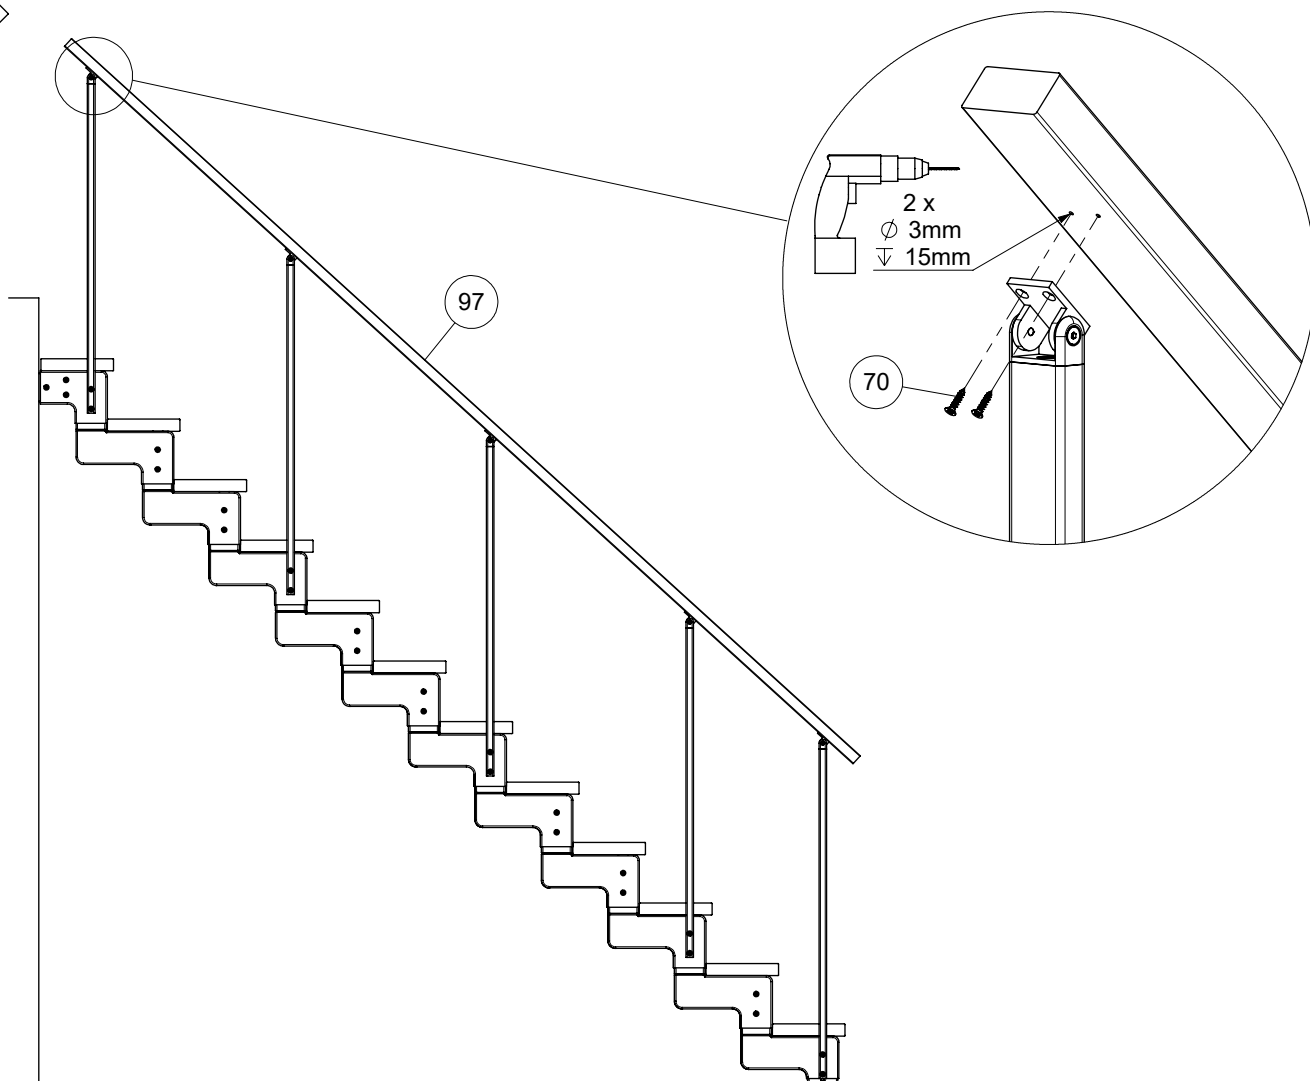

22

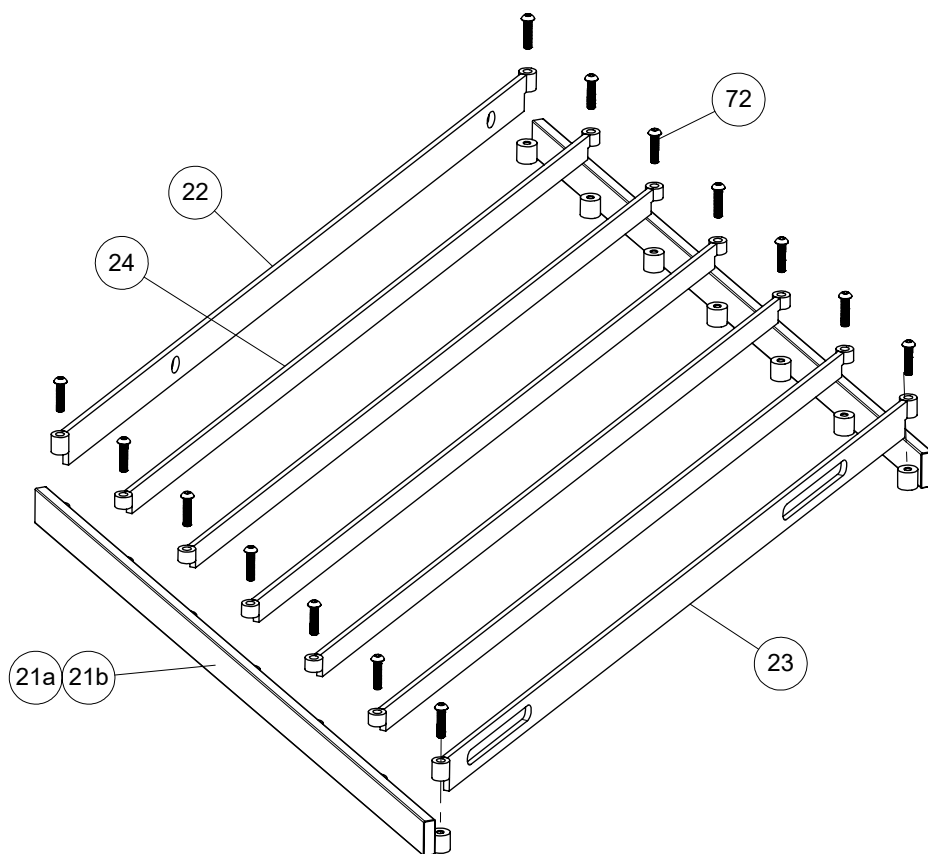

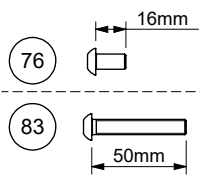

76/83


91

28


82

91

80

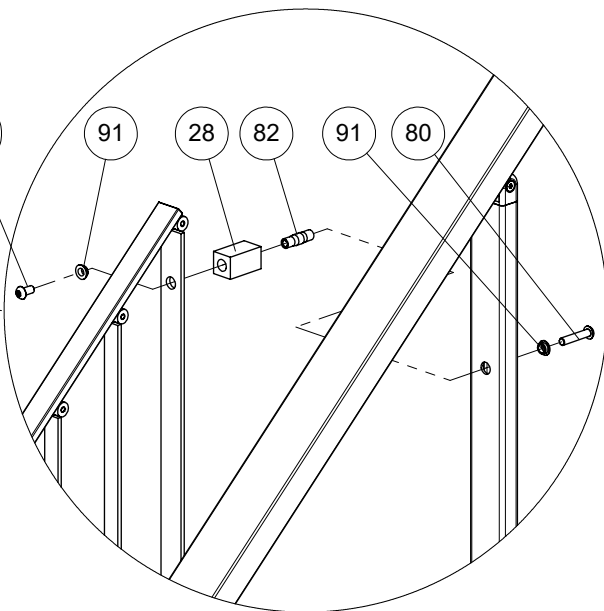

28

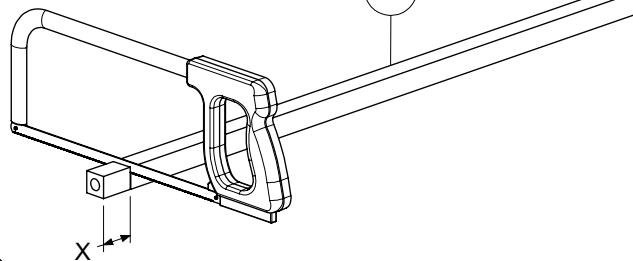

83


91

81

28

91

80

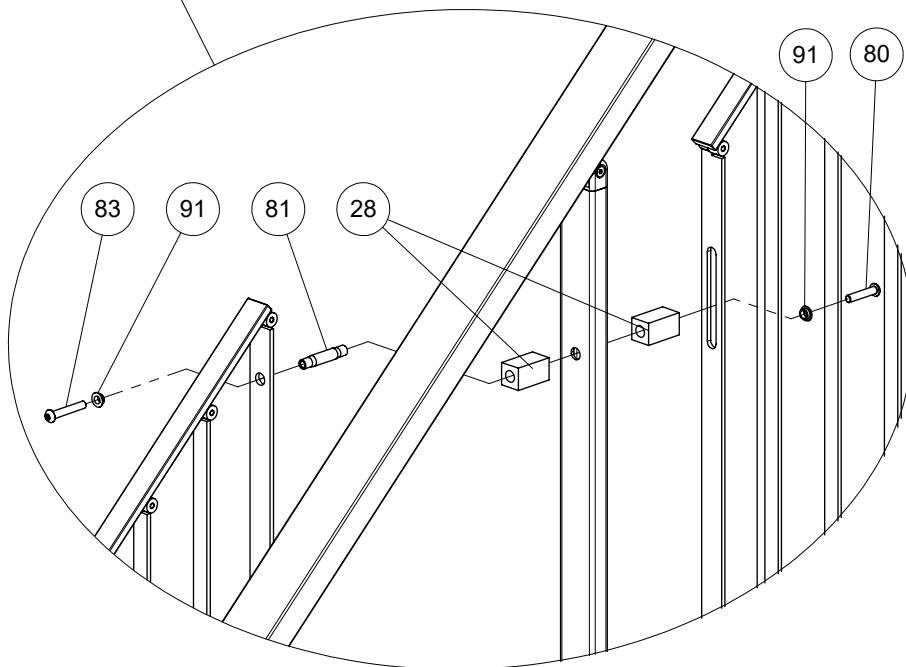



We recommend
using a support
column from 8 treads
and if $W = 100$ cm

Ab 8 Stufen und $W =$
100 cm empfehlen
wir eine Abstützung
der Treppe

